
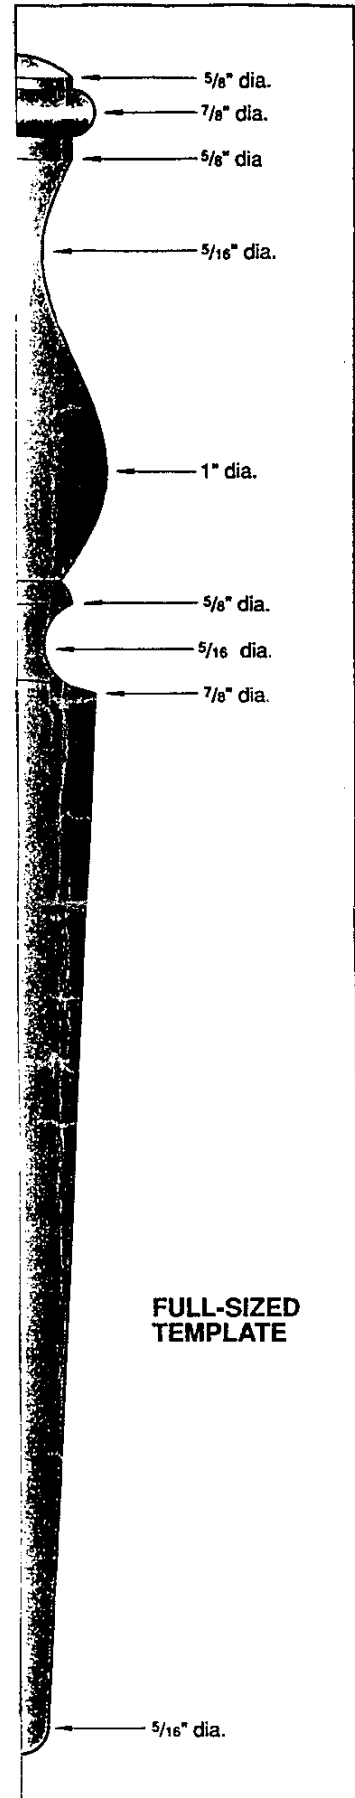


Finishing Touch

1. Once you've formed the blade, remount the stock on the true centers, and finish-sand the handle. Next turn the excess waste at the handle end, working this diameter to $1/8$ ". Then remove the turning from the lathe, and bandsaw the off the ends.

2. File and finish-sand the $1/8$ " waste from the handle end. Next, sand the waste from the blade tip, forming it to shape as you go. Now, finish-sand the entire blade, being careful to maintain its turned form.

3. Apply your choice of finish.
ENJOY YOUR
LATHED LETTER
OPENER

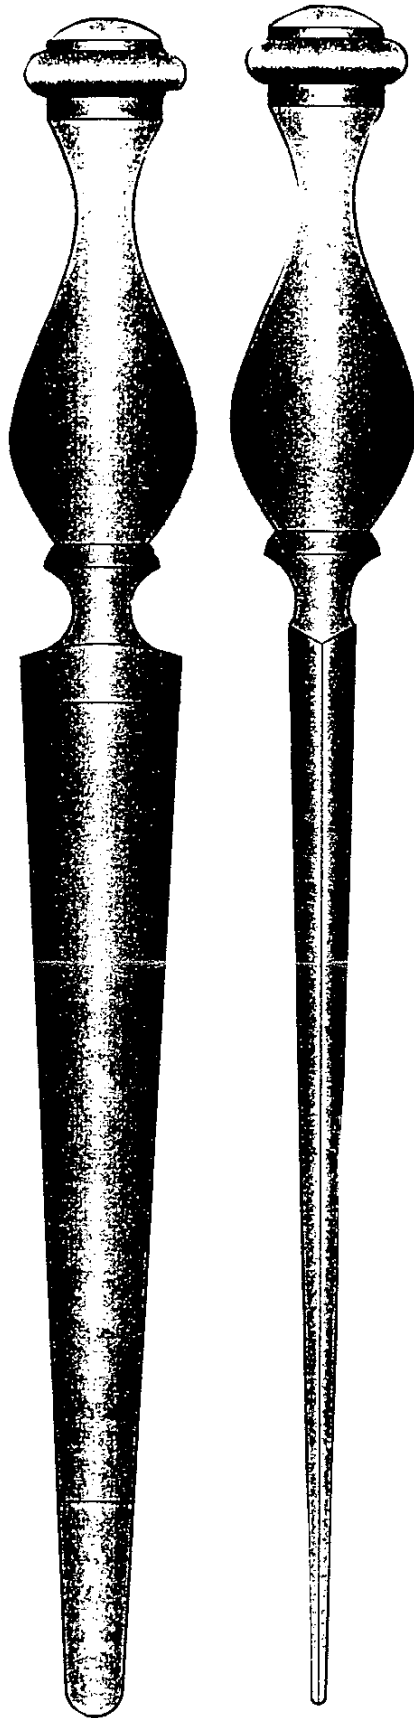

FULL-SIZED
TEMPLATE